


I/O Module Set Up SOP


1. Please prepare the following steps to complete the related set up.
2. Download and install the USB driver software ◦

http://www.yottacontrol.com/download/A5X_USB_DRIVER.rar

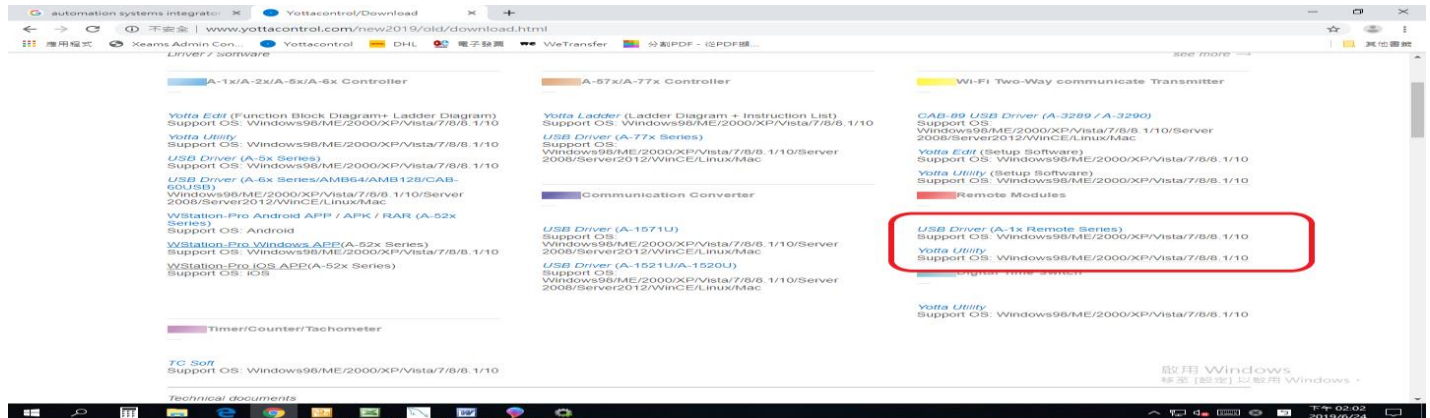


3. Download and install the YottaUtility

http://www.yottacontrol.com/download/YOTTA_UTY.rar

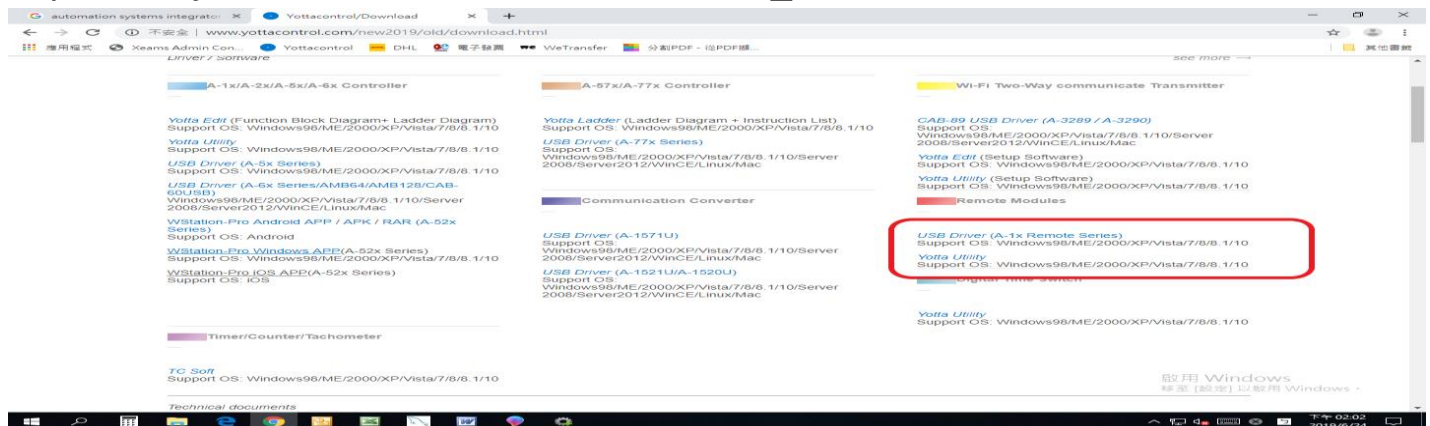


4. Window's Device manager → COM and LPT → search COM port ◦


Picture# 1

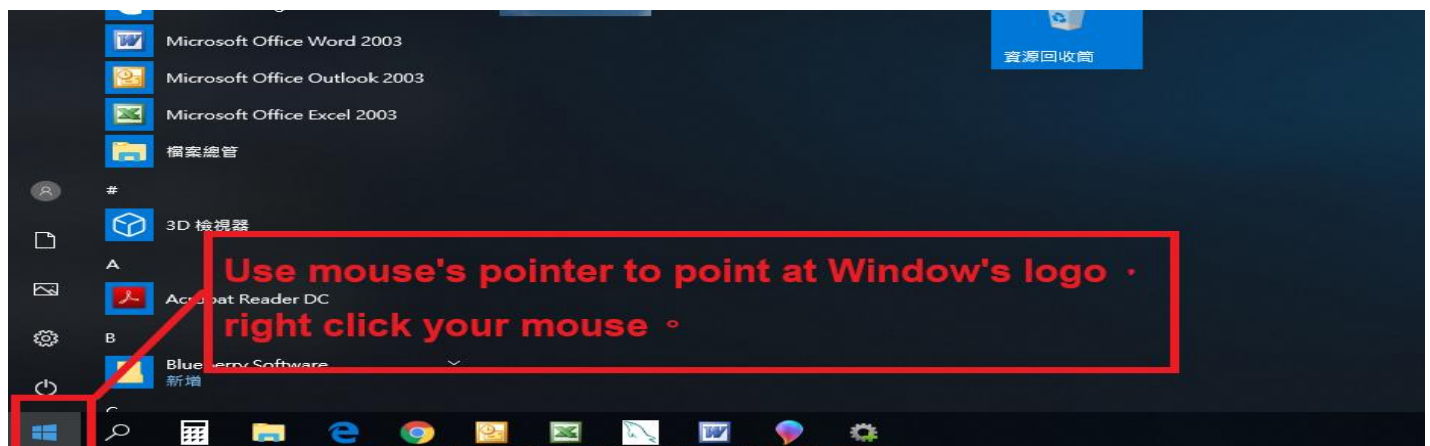


Picture# 2

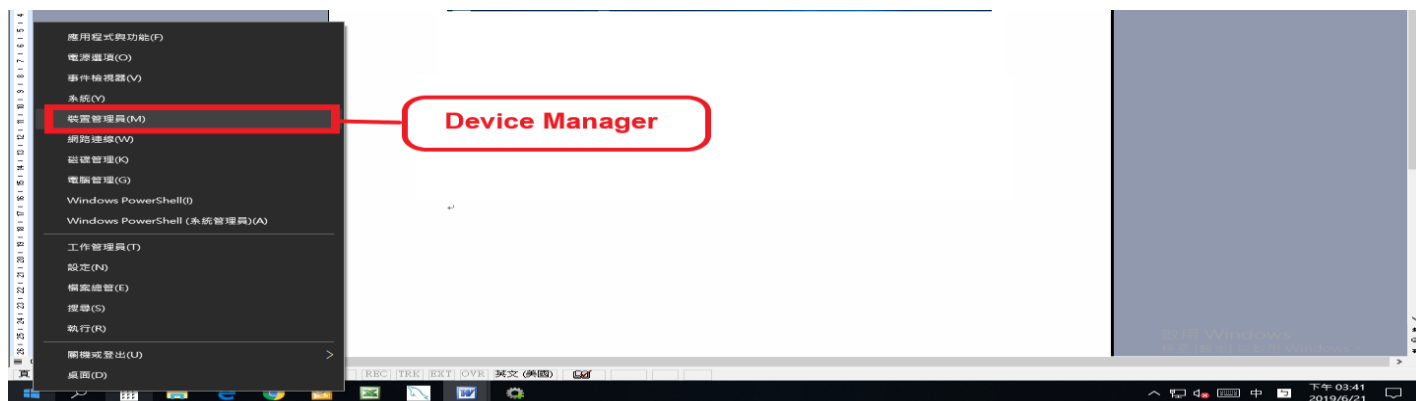


Picture# 3

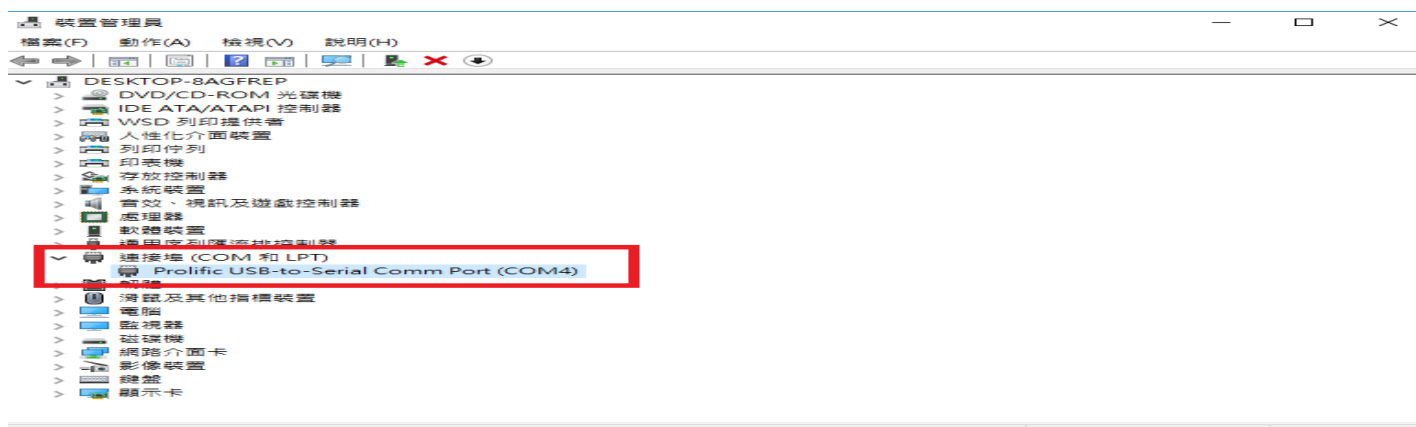


5. Turn on the power of the module and switch the rear switch of the module to the **Init position**; connect to the computer via a USB communication cable or RS-485.

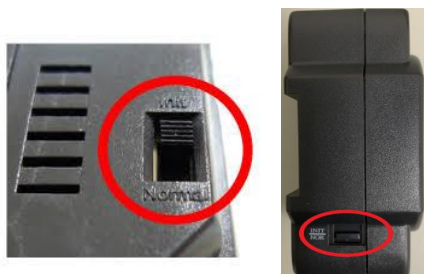



6. Open YottaUtility software ◦

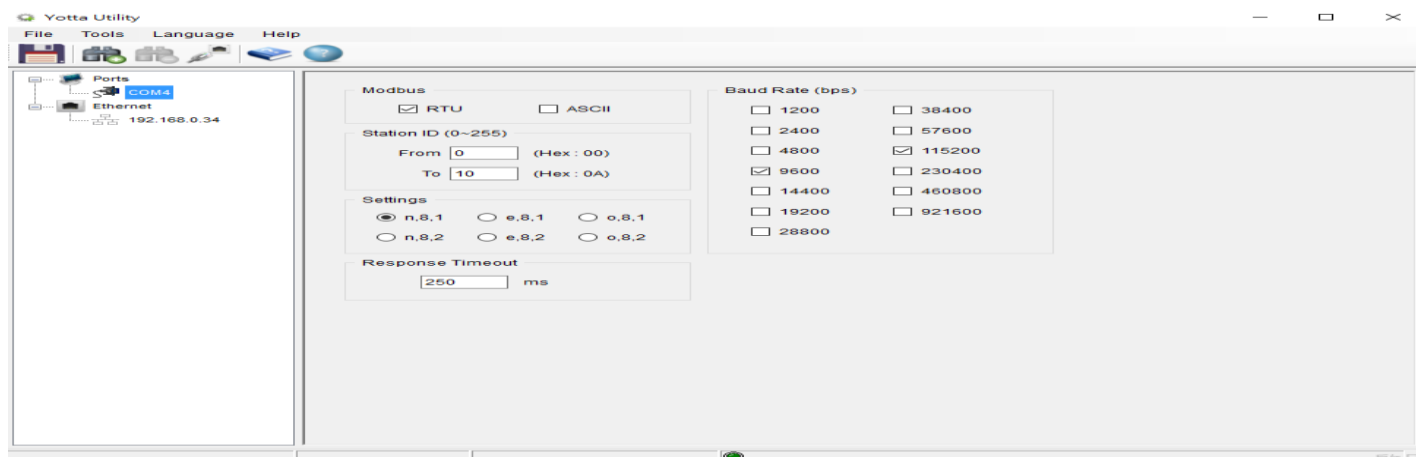

7. Click  search IO module ◦

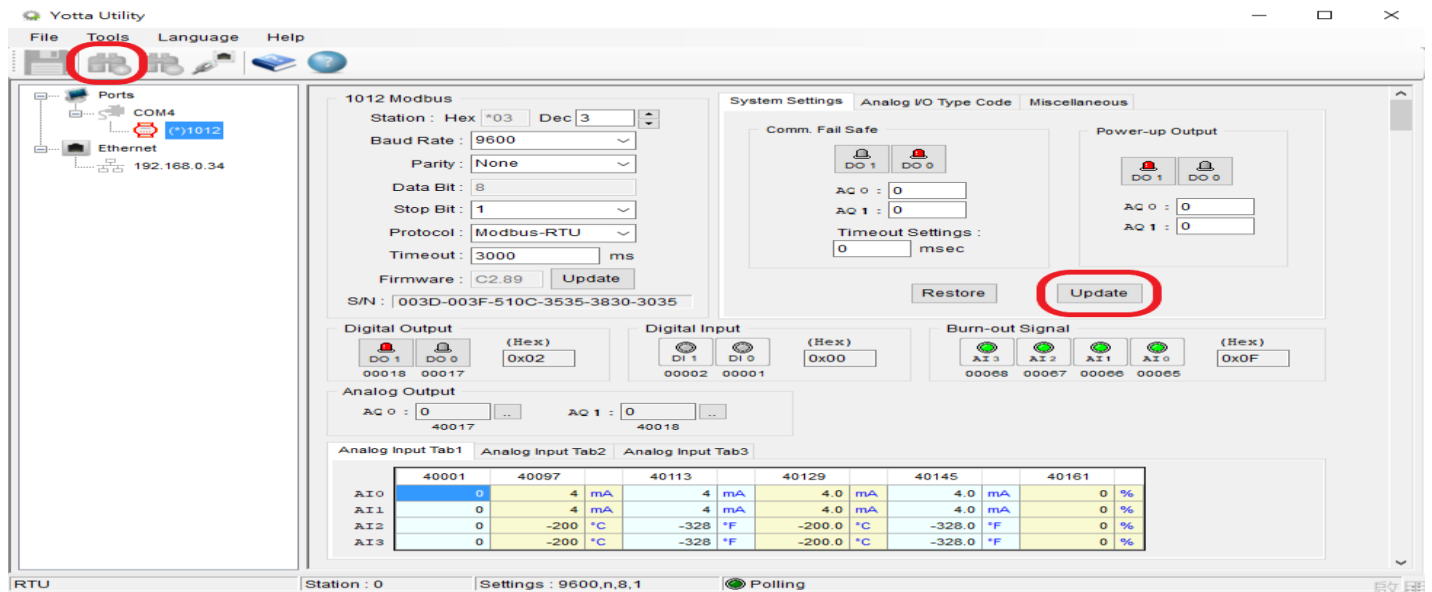

Complete the parameter settings from the above figures and click the "Update" button when finished. Switch the rear of the module to the Normal position and turn off power and turning the power back on. Do not unplug the USB communication cable!

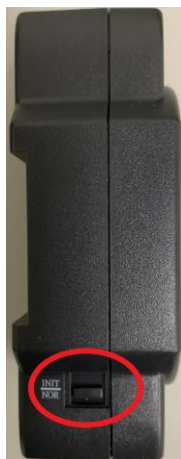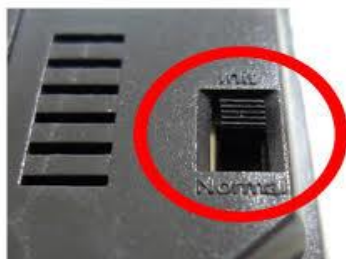

8. Finish set up ◦